



Tour Action 4

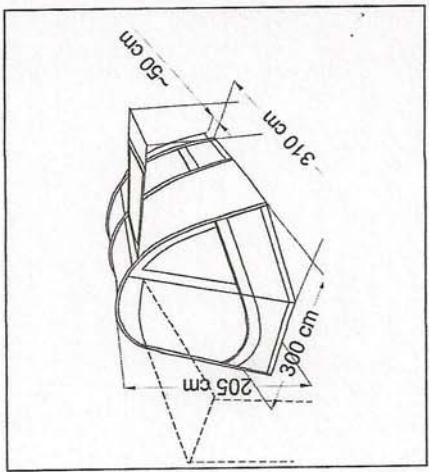

- Zelt nur bei geschlossenen Reißverschlüssen abspannen!
Always close tent zippers before tightening the guy ropes!
- Avant de planter les piquets pour tendre et fixer la toile de tente, vérifier que tout les fermetures éclairées soient bien fermées.
De tent altijd met gesloten ritssluitingen spannen
- Suljethan vetoketjut ainna ennen lopullista kirstämistä!
Stäng alltid dragkedjorna innan du spänner tält tyget!

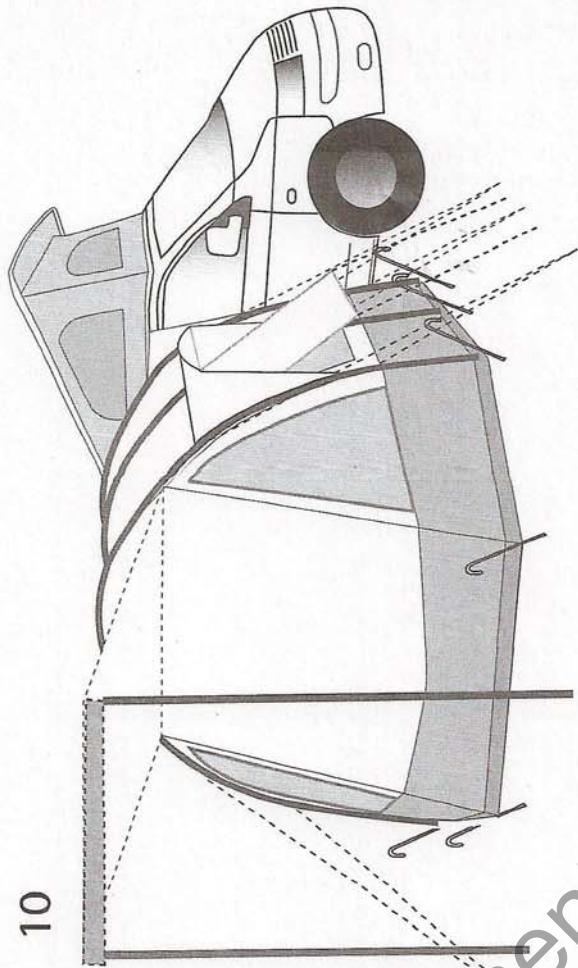