

## Self-Recovery Winch

Model: DV-9

PN: 856329 12V DC 856355 24V DC

## Introduction

#### ▶ Feature

Line pull: 4,082 kg / 9,000 lb wire rope first layer

Wire rope:  $8.3 \text{ mm} \times 30.5 \text{ m} (21/64" \times 100')$  galvanized aircraft A7 × 19

Brake: Patented cone brake holds full load

Clutch: Turn the T-handle for rapid wire rope payout

Control: Handheld pendant switch to power the winch

## ▶ Unpacking

· Winch assembly	1 pc
Detachable control box	1 pc
· Remote control	1 pc
Wire rope with hook	1 pc
· Roller fairlead	1 pc
• 1.8 m ( 6' ) 2 gauge battery lead	1 pc

#### ► Read this manual carefully


You should carefully read and understand this manual before operating it. Careless winch operation may result in personal injury hazards or property damage.

## Installation

Before using the winch, make sure all electrical components have no corrosion or damaged; the environment should be clear and dry.

## ▶ Winch and roller fairlead mountings


- It is very important that the winch will be mounted on a flat and hard surface of mounting channel in order to make sure the motor, drum and gearbox housing are aligned correctly.
- Roller fairlead does not mount to the winch directly.
- · The wire rope shall be wound in an under-wound

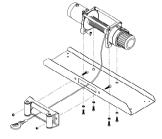

- orientation only.
- Four (4) M10 x 1.50 pitch 8.8 grade high tensile steel bolts must be used in order to sustain the loads imposed on the winch mounting.
- Two (2) M12 x 1.75 pitch 8.8 grade high tensile steel bolts must be used for fastening the roller fairlead into the mounting channel.


## ▶ Wiring Diagram

Attach the black lead firmly to the negative (–) battery terminal and red lead to the positive (+) battery terminal. The voltage drop for the winch motor must not exceed 10% of the nominal voltage of 12/24V DC.

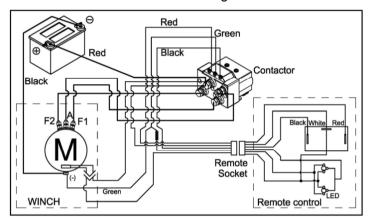

### ▶ Nut fastening for motor & contactor

- 1. Holding the lower nut on the stub and fastening the upper nut clockwise.
- 2. The torque setting for nut is 14 N-m/124 lb-in.

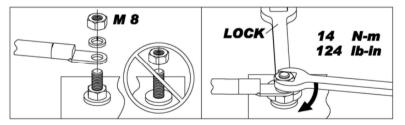

## **Warning**

- The winch is not intended to be used in any manner for the movement or lifting of personnel.
- The rated line pull shown is based on the first layer of rope on the drum.
- The rope winding on the drum shall remain 5 wraps from the drum.

# Parts List

Item No.	Description	Part No.	Qty
1	Motor 12V	882153	1
	Motor 24V	883126	_ '
2	Tie bar kit	880003	2
3	Motor support rack	881779	1
4	Motor coupling	880005	1
5	Drum bushing	880006	2
6	Drum kit	881101	1
7	Gearbox support rack	881780	1
8	Grounding lead	880009	1
9	Wire rope w/hook	880010	1
10	1 <sup>st</sup> shaft	880011	1
11	3 <sup>rd</sup> ring gear kit	881781	1
12	3 <sup>rd</sup> stage carrier	880013	1
13	3 <sup>rd</sup> bushing	880014	1
14	2 <sup>nd</sup> stage carrier	880015	1
15	1 <sup>st</sup> stage carrier	880016	1
16	1 <sup>st</sup> & 2 <sup>nd</sup> ring gear	880017	1
17	1 <sup>st</sup> pinion kit	880018	1
18	Clutch kit	881303	1
19	Gear box kit	881782	1
20	Cone brake disc kit	880021	1
21	Brake cover kit	881783	1
22	Roller fairlead	880023	1
23	Mounting hardware	880024	1
24	Remote control	880126	1
25	Handsaver strap	880026	1
26	Detachable control box 12V	881164	1
	Detachable control box 24V	881165	- I
26-1	Remote socket kit 12V	881386	1
	Remote socket kit 24V	881387	┦ '
26-2	Detachable control pack 12V	881415	4
	Detachable control pack 24V	881416	1
27	Brake clutch base	881100	1

# **Winch Assembly**

